


### 35.Day Time Running Light Unit

#### A: REMOVAL

- 1) Remove the instrument panel lower cover. <Ref. to EI-38, REMOVAL, Instrument Panel Lower Cover.>
- 2) Remove the fuse box and disconnect the connector.
- 3) Remove the mounting nuts, and detach the day-time running light module.

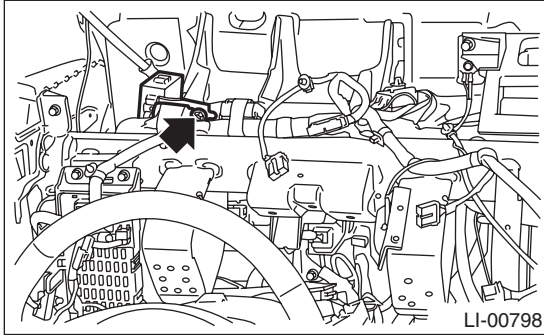

#### B: INSTALLATION

Install in the reverse order of removal.

#### ***Tightening torque:***

***7.5 N·m (0.76 kgf-m, 5.5 ft-lb)***